


Bay Area Stormwater Requirements for Construction Projects¹

Project Impervious Area = new/replaced impervious area (e.g. roof, garage, concrete or asphalt surface) + disturbed soil area

Note: Impervious surfaces do not let water drain through. Disturbed soil areas include anywhere digging goes below concrete or asphalt.

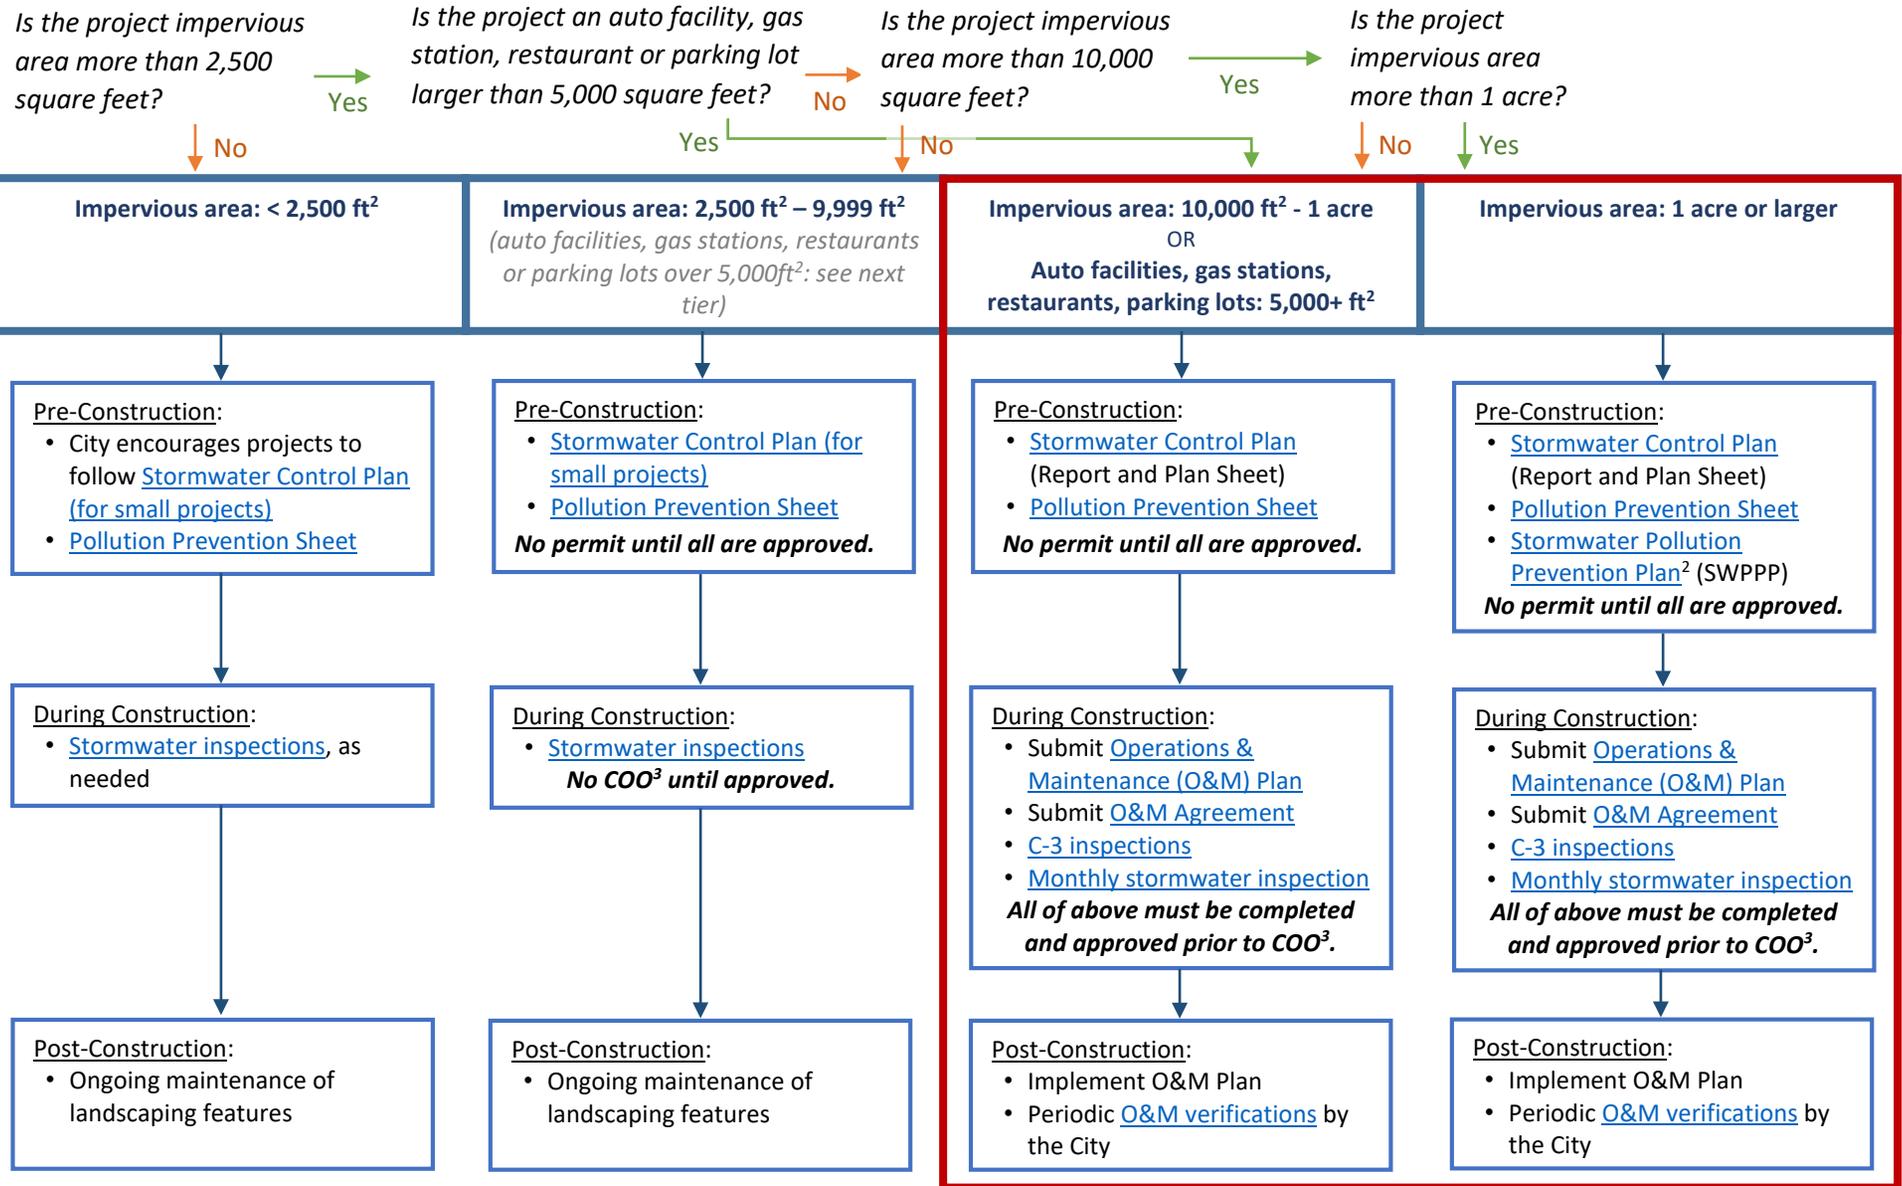

C.3 Regulated Projects

- The National Pollutant Discharge Elimination System (NPDES) regulates stormwater discharge across the U.S. The San Francisco Bay Area is regulated by NPDES through the Municipal Regional Permit (MRP). The above requirements are summarized from the MRP 2.0, approved in 2016. See the most recent edition of the Contra Costa Clean Water Program (CCCWP) *Stormwater C.3 Guidebook* for more details. Refer to the City of San Pablo *Green Infrastructure Plan* for additional resources.
- Submit to the San Francisco Bay Regional Water Quality Control Board.
- COO = Certificate of Occupancy