


PEAK HOUR ITM SUMMARY

#007 21st St & Emeric Avenue

LOCATION#: 007	QTD PROJ#: 100158	AM PEAK: 745 AM
NORTH / SOUTH: 21st St	DATE: Tuesday, September 28, 2010	MD PEAK: 1130 AM
EAST / WEST: Emeric Avenue	VICINITY: San Pablo, CA	PM PEAK: 500 PM

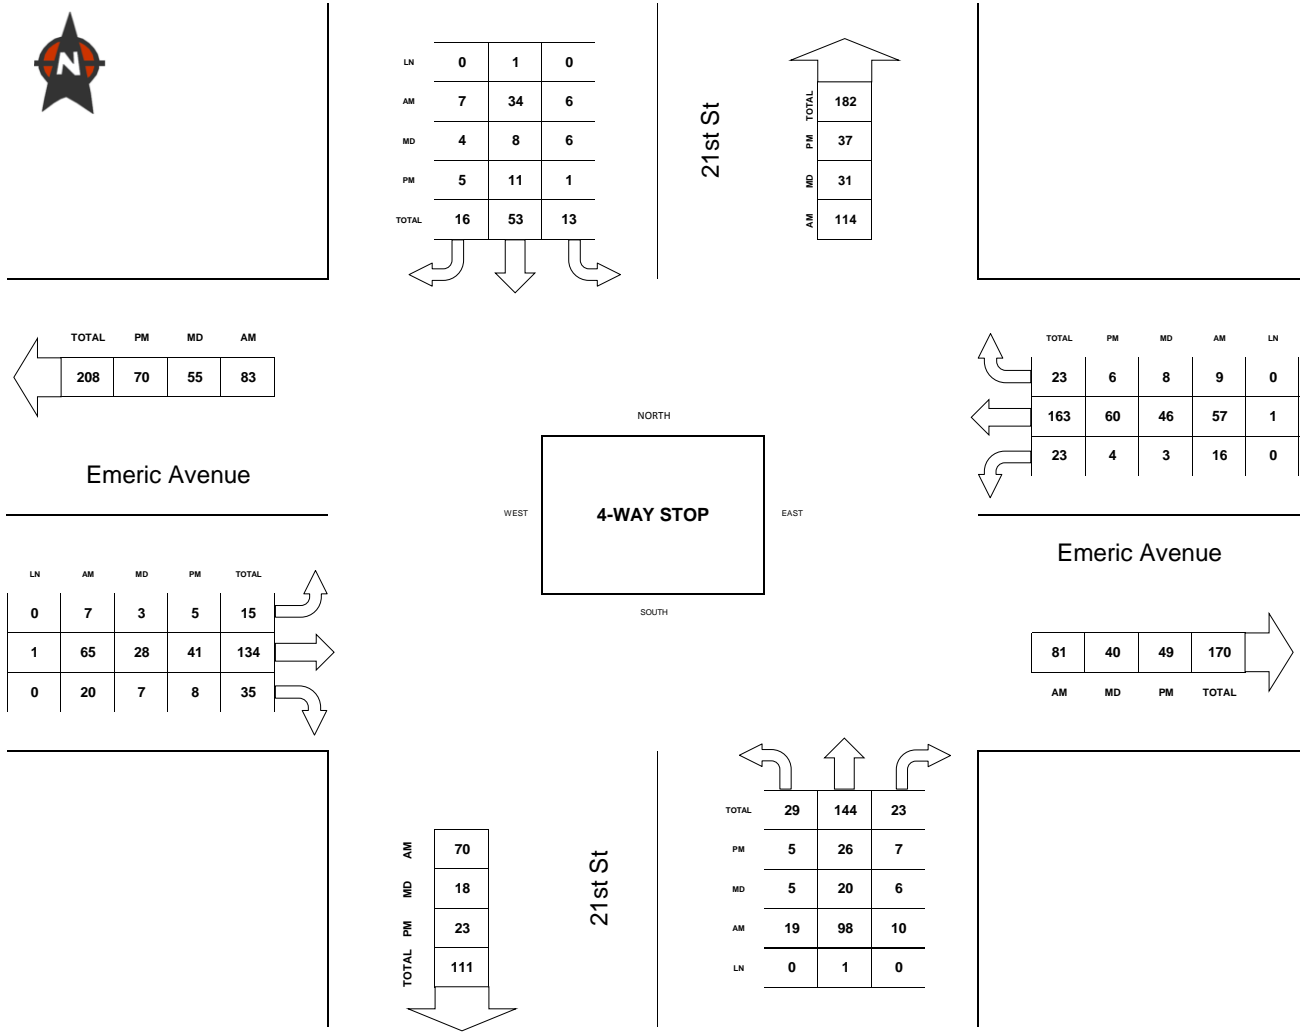

AM COUNT 7:00AM TO 9:00AM MD COUNT 11:30AM TO 1:30PM PM COUNT 4:00PM TO 6:00PM



QUALITY TRAFFIC DATA, LLC

9701 W Pico Blvd, Suite 205, Los Angeles, CA 90035
 Phone: 310-341-0019 Fax: 310-807-9247 Info@QualityTrafficData.com

VEHICLE TURNING MOVEMENT COUNT

#007 21st St & Emeric Avenue - AM PEAK

LOCATION#: 007
 NORTH / SOUTH: 21st St
 EAST / WEST: Emeric Avenue

QTD PROJ#: 100158
 DATE: Tuesday, September 28, 2010
 VICINITY: San Pablo, CA

DIRECTION:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	TOTALS
LANES:	0	1	0	0	1	0	0	1	0	0	1	0	
6:00 AM													
6:15 AM													
6:30 AM													
6:45 AM													
7:00 AM	0	1	5	0	0	0	0	8	0	0	2	2	18
7:15 AM	0	3	0	0	0	2	0	14	0	2	7	1	29
7:30 AM	1	4	0	0	2	0	1	13	1	0	13	0	35
7:45 AM	2	12	2	1	3	0	2	22	4	2	14	0	64
8:00 AM	8	32	3	4	9	2	1	24	9	1	13	2	108
8:15 AM	7	34	2	0	17	3	0	8	5	12	14	3	105
8:30 AM	2	20	3	1	5	2	4	11	2	1	16	4	71
8:45 AM	1	6	2	2	3	0	0	12	1	0	9	1	37
9:00 AM													
9:15 AM													
9:30 AM													
9:45 AM													
10:00 AM													
10:15 AM													
10:30 AM													

VOLUME STATS:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	TOTALS
TOTAL:	21	112	17	8	39	9	8	112	22	18	88	13	467
P.H.V: ₁	19	98	10	6	34	7	7	65	20	16	57	9	348
P.H.F: ₂	0.738		0.588			0.676			0.707			0.806	

- (1) Peak Hour Volume (Peak Hour Begins At 745 AM)
- (2) Peak Hour Factor (directional aggregate)



QUALITY TRAFFIC DATA, LLC

9701 W Pico Blvd, Suite 205, Los Angeles, CA 90035
 Phone: 310-341-0019 Fax: 310-807-9247 Info@QualityTrafficData.com

VEHICLE TURNING MOVEMENT COUNT

#007 21st St & Emeric Avenue - MD PEAK

LOCATION#: 007
 NORTH / SOUTH: 21st St
 EAST / WEST: Emeric Avenue

QTD PROJ#: 100158
 DATE: Tuesday, September 28, 2010
 VICINITY: San Pablo, CA

DIRECTION:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	TOTALS
LANES:	0	1	0	0	1	0	0	1	0	0	1	0	
10:45 AM													
11:00 AM													
11:15 AM													
11:30 AM	0	7	0	1	3	1	1	8	4	2	10	4	41
11:45 AM	2	6	1	0	2	2	0	7	1	0	9	1	31
12:00 PM	3	3	2	2	1	0	0	9	0	1	14	2	37
12:15 PM	0	4	3	3	2	1	2	4	2	0	13	1	35
12:30 PM	0	2	0	1	3	2	0	9	0	1	10	2	30
12:45 PM	1	4	3	2	2	0	0	6	1	2	11	1	33
1:00 PM	0	1	1	0	0	0	1	3	0	1	9	0	16
1:15 PM	1	2	0	2	1	0	0	8	0	0	11	0	25
1:30 PM													
1:45 PM													
2:00 PM													
2:15 PM													
2:30 PM													
2:45 PM													
3:00 PM													
3:15 PM													
3:30 PM													
3:45 PM													

VOLUME STATS:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	
TOTAL:	7	29	10	11	14	6	4	54	8	7	87	11	248
P.H.V: ₁	5	20	6	6	8	4	3	28	7	3	46	8	144
P.H.F: ₂	_____	0.861	_____	_____	0.750	_____	_____	0.731	_____	_____	0.838	_____	0.878

(1) Peak Hour Volume (Peak Hour Begins At 1130 AM)

(2) Peak Hour Factor (directional aggregate)



QUALITY TRAFFIC DATA, LLC

9701 W Pico Blvd, Suite 205, Los Angeles, CA 90035
 Phone: 310-341-0019 Fax: 310-807-9247 Info@QualityTrafficData.com

VEHICLE TURNING MOVEMENT COUNT

#007 21st St & Emeric Avenue - PM PEAK

LOCATION#: 007
 NORTH / SOUTH: 21st St
 EAST / WEST: Emeric Avenue

QTD PROJ#: 100158
 DATE: Tuesday, September 28, 2010
 VICINITY: San Pablo, CA

DIRECTION:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	TOTALS
LANES:	0	1	0	0	1	0	0	1	0	0	1	0	
3:00 PM													
3:15 PM													
3:30 PM													
3:45 PM													
4:00 PM	3	7	1	1	1	1	1	5	0	3	11	0	34
4:15 PM	0	4	0	0	2	0	2	11	1	0	14	0	34
4:30 PM	1	3	2	0	3	2	1	12	2	2	20	2	50
4:45 PM	0	6	0	0	2	1	0	13	0	1	17	1	41
5:00 PM	2	5	2	0	1	0	0	9	1	2	18	0	40
5:15 PM	1	8	3	0	3	2	0	12	2	2	11	1	45
5:30 PM	2	6	0	1	4	1	2	8	2	0	13	2	41
5:45 PM	0	7	2	0	3	2	3	12	3	0	18	3	53
6:00 PM													
6:15 PM													
6:30 PM													
6:45 PM													

VOLUME STATS:	NL	NT	NR	SL	ST	SR	EL	ET	ER	WL	WT	WR	
TOTAL:	9	46	10	2	19	9	9	82	11	10	122	9	338
P.H.V: ₁	5	26	7	1	11	5	5	41	8	4	60	6	179
P.H.F: ₂	_____	0.792	_____	_____	0.708	_____	_____	0.750	_____	_____	0.833	_____	0.844

- (1) Peak Hour Volume (Peak Hour Begins At 500 PM)
- (2) Peak Hour Factor (directional aggregate)



QUALITY TRAFFIC DATA, LLC

9701 W Pico Blvd, Suite 205, Los Angeles, CA 90035
 Phone: 310-341-0019 Fax: 310-807-9247 Info@QualityTrafficData.com